

**First two letters of ID code are frequency as shown below.**

Each system in a plant must have a separate ID Code. Two systems with the same ID Code will be able to "talk" to each other. All systems are shipped from the factory with a unique ID Code. In the case of spares management, it is recommended that the receiver ID Code not be changed, rather a transmitter ID Code be made to match that of a receiver.

FREQ	CODE	FREQ	CODE	FREQ	CODE	FREQ	CODE
903.0	03	909.3	18	915.6	2D	921.9	42
903.3	04	909.6	19	915.9	2E	922.2	43
903.6	05	909.9	1A	916.2	2F	922.5	44
903.9	06	910.2	1B	916.5	30	922.8	45
904.2	07	910.5	1C	916.8	31	923.1	46
904.5	08	910.8	1D	917.1	32	923.4	47
904.8	09	911.1	1E	917.4	33	923.7	48
905.1	0A	911.4	1F	917.7	34	924.0	49
905.4	0B	911.7	20	918.0	35	924.3	4A
905.7	0C	912.0	21	918.3	36	924.6	4B
906.0	0D	912.3	22	918.6	37	924.9	4C
906.3	0E	912.6	23	918.9	38	925.2	4D
906.6	0F	912.9	24	919.2	39	925.5	4E
906.9	10	913.2	25	919.5	3A	925.8	4F
907.2	11	913.5	26	919.8	3B	926.1	50
907.5	12	913.8	27	920.1	3C	926.4	51
907.8	13	914.1	28	920.4	3D	926.7	52
908.1	14	914.4	29	920.7	3E	927.0	53
908.4	15	914.7	2A	921.0	3F		
908.7	16	915.0	2B	921.3	40		
909.0	17	915.3	2C	921.6	41		

**Figure 4. Table of Frequency Codes**

If the programmer is not already on, turn the programmer power on by pressing the ON button. The display will show what device the programmer is connected to (transmitter or receiver) for 5 seconds and then will read and display the ID Code of the unit. If the receiver contains multiple ID Codes, the display will start with the first ID Code. To display other ID Codes, press the SEL key. Only the number of ID Codes programmed into the receiver will be accessible. If additional ID Codes are needed, contact the factory or your Remtron representative.

**TX CONNECTED**

**ID CODE 28008C**